

Strichange Processing to the strick of the s

REGO-LOK™

for Securing CGA Fittings on Liquid Cylinders


Application

The REGO-LOK™ is designed for installation on the Rego T9450 and T9460 Series liquid cylinder valves to deter and prevent the removal of the CGA fitting from the valve. The REGO-LOK™ retains standard CGA outlet connection so unauthorized persons do not remove the fitting. By use of a special one-way bolt, the REGO-LOK™ is secured to the valve. The REGO-LOK™ installs in a few minutes with the use of screwdrivers, without valve disassembly, brazing, welding, or drilling. The REGO-LOK™ deters and prevents fitting removal by gas customers, however allows the replacement of fittings by authorized gas supplier plant personnel.

Use The REGO-LOK™ for compliance with CGA SB-26 for medical and industrial liquid cylinders.

Features

- Stainless Steel REGO-LOK™ with one-way bolt.
- · Retrofit all common liquid cylinder valves.
- · Can be supplied on new Rego liquid cylinder valves.
- REGO-LOK™ indicates "WARNING: DO NOT REMOVE"
- Worn CGA fittings can be simply replaced by authorized personnel. Requires new 9464RL-6 Bolt
- Can fit over existing fittings for CGA 540, CGA 440, CGA 295, CGA 320, and CGA 326. Check fitting hex size.
 - NOTE: Rego supplied fitting P/N CGA580RL is required for REGO-LOK $^{\rm TM}$ use with CGA 580 connection.








Rego-Lok™

Satisfies CGA SB-26 and FDA requirements for medical and industrial liquid cylinders.

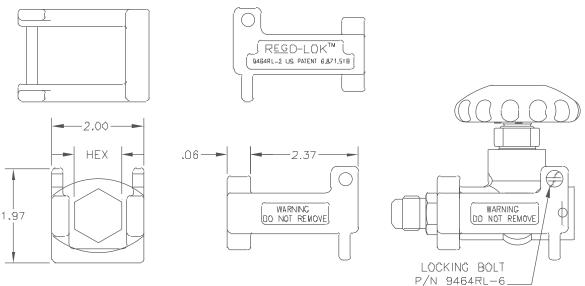

Ordering Information

Part Number	Item Description	Typical Service Connection
9464RL-0	REGO-LOK™ for ¾" hex fittings	
9464RL-1	REGO-LOK™ for ¾" fittings	CGA 320, CGA 326 & CGA 295
9464RL-2	REGO-LOK™ for 1" fittings	CGA 440, CGA 540
9464RL-3	REGO-LOK™ for 11/8" hex CGA 580RL fitting by Rego	CGA 580
CGA580RL	%" MNPTxCGA for use with 9464RL-3	CGA 580

